











Pager Controls and Indicators

Icons:



-  Alarm is set
-  Vibrate mode
-  Musical alert
-  New message
-  Message is locked

-  Message continues
-  Out-Of-Range
-  Battery Low
-  Phone Book
-  Auto On/Off is active

Function - Press to move between features and change values.

Select/Backlight - Press to select features and turn backlight on or off.

Read/Escape - Press to read messages or return to the Status screen.

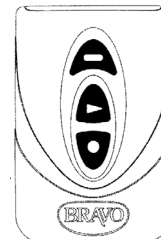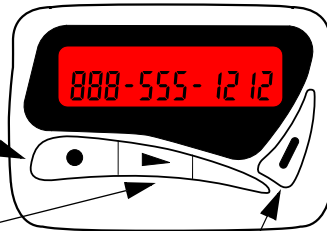


- **Function:** Press to move between features and change values.
- ▶ **Select/Backlight:** Press to select features and turn on/off the backlight.
- **Read/Escape:** Press to read messages or return to the Status screen.

Contents

Introduction	1	Phone Book.....	10
Pager Controls and Indicators	1	Adding Phone Numbers	10
Getting Started	3	Modifying Phone Numbers	11
Battery Information.....	3	Browsing Your Phone Book Entries	11
Installing/Replacing the Battery	3	Searching Your Phone Book Entries...	12
Turning Your Pager On	4	QuickWords	12
Turning Your Pager Off	4	Setting the Auto On/Off Times	13
Turning on the Backlight.	4	Setting the Countdown Timer	13
Pager Tips.....	4		
Personalizing Your Bravo 500 Pager.....	5		
Time and Date.....	5		
Setting the Time	5		
Setting the Date	6		
Setting the Alarm	6		
Displaying Date or Day of the Week	7		
Setting the Message Alert	7		
Setting the Reminder Alert.....	7		
Messages	8		
Reading Messages	8		
Locking/Unlocking Messages	8		
Storing Individual Messages	9		
Deleting Messages	9		


Getting Started

Battery Information

Your pager uses one AAA-size alkaline battery (do not use carbon zinc batteries). If  is displayed, the battery is low. Replace the battery.

Installing/Replacing the Battery

Note: You only have two minutes to replace the old battery with the new battery. Otherwise, you may lose all saved settings and pages.

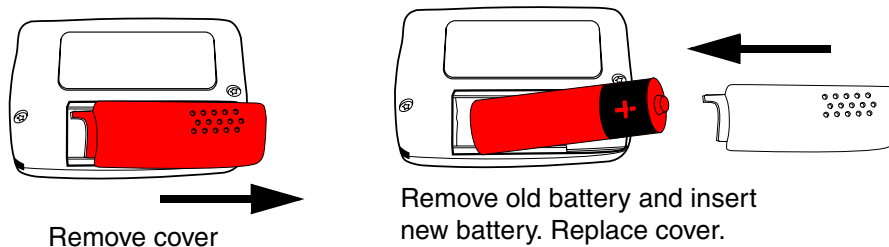


Caution! You must match the (+) and (-) polarity markings. If you insert the battery backwards, your pager settings (time, date, etc.) will be erased.





Turning Your Pager On

Press	To Display	Description
—	Status Screen 	The Status screen displays the date and time and other status indicators.

Turning Your Pager Off

Press	To Display	Then Press
●	PAGER OFF	►

Turning on the Backlight.

Press	To Display	Then Press
► and hold	Backlight	Automatically turns off.

Pager Tips

1. After 8 seconds of inactivity, the pager returns to the Status screen without saving the changes.
2. Press and hold ● to speed up the scrolling of the character being changed.

Personalizing Your Bravo 500 Pager



Press	To Display	Then Press
●	POWER UP SCR	► to display Power Up
● to set character	A to 9	► to go to next character
Repeat	Up to 20 characters	■ to save Power Up

Time and Date

Setting the Time

Your pager can be set to a 24-hour format when you buy it, or you can have your Service Center or service provider change it to a 24-hour format.

Press	To Display	Then Press
●	SET TIME	► to display the time
● to set the hour	11 to 121	► to go to next field
● to set minutes	01 to 00	► to go to next field
● for a.m. or p.m.	A or P	■ to save



Setting the Date

Press	To Display	Then Press
●	SEE DATE	► to display the date
● to set month	JAN to DEC	► to go to next field
● to set day	01 to 31	► to go to next field
● to set year.	01	■ to save

Note: When you change the date, the day of the week is automatically updated.

Setting the Alarm

Press	To Display	Then Press
●	SEE ALARM	► to display alarm status
●	ALARM 1, 2, or 3	► to select an alarm
● for alarm type	OFF, DLY, SCH, or MBL	► to select alarm type
● and ►	alarm time [plus month/day if SCH]	► to advance to alarm prompt message
● to set character	A to 9	► to go to next character
Repeat	up to 20 characters	■ to save



Displaying Date or Day of the Week

Press	To Display	Then Press
► to switch between date & day of the week	JAN 1 12:00 PM or MON 12:00 PM	

Setting the Message Alert

Press	To Display	Then Press
●	SET ALERT	► to display alert type
●	VIBRATE, AUDIBLE, NO ALERT	► to select alert type
● if AUDIBLE	ALERT 1 to ALERT 12	► to select alert tone

Setting the Reminder Alert

Press	To Display	Then Press
●	SET REMINDER	► to activate
●	REM ON	► to display setting
●	01 to 60 (minutes)	■ to save



Messages

Your pager can store up to 20 personal messages and 5 maildrop messages.

Reading Messages

Press	To Display	Description
-	2 PAGES	Number of messages
-	123-4567	First Numerical message
-	00 13-A	Number in brackets and address (usually A).
●	next message	

Locking/Unlocking Messages

You can lock up to ten messages to protect them.

Note: You cannot lock maildrop messages.

Press	To Display	Then Press
● with unlocked message displayed	LOCK#	► to lock the message
● with locked message displayed	UNLOCK#	► to unlock the message



Storing Individual Messages

Press	To Display	Then Press
●	SAVE DIR	▶ to display name prompt
● to set character	A to Z	▶ to go to next character
— to save name	1d MELODY	● to select music alert
		— to save

Deleting Messages

Note: Messages must be unlocked before they can be deleted.

Deleting a Maildrop Message

Press	To Display	Then Press
● with maildrop message displayed	DELETE MAIL	▶ to delete maildrop message

Deleting an Individual Message

Press	To Display	Then Press
●	DELETE MSG	▶ to delete message



Deleting All Messages

Press	To Display	Then Press
● with Status screen displayed	DELETE ALL	► to delete all unlocked messages

Phone Book

You may store telephone numbers for up to 12 people and assign one of the 9 alert tones to each entry.

Adding Phone Numbers

Press	To Display	Then Press
●	TEL DIR	► to display phone book
●	Add DIR	► to display NAME prompt
● and ►	Full Name	■ to save & display TEL -
● and ►	Phone Number	■ to save & display ID MELODY
●	123456789	● to hear alert 1
Repeat	Desired alert	► to assign alert and exit



Modifying Phone Numbers

Press	To Display	Then Press
●	<i>TEL DIR</i>	► to display phone book
●	<i>MODIFY DIR</i>	► to display first entry
●	Desired phone book entry	► to edit
● and ►	Correct Name	■ to save & display <i>TEL -</i>
● and ►	Correct Phone Number	■ to save & display <i>1d MELODY</i>
►	<i>123456789</i>	● to select music alert
►	to save changes	

Browsing Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	► to display phone book
●	<i>BROWSE</i>	► to display first entry
●	Each phone book entry	► to view entry



Searching Your Phone Book Entries

Press	To Display	Then Press
●	<i>TEL DIR</i>	► to display phone book
●	<i>SEARCH</i>	► to activate search
● and ►	First Few Characters	■ to jump to matching entry

Note: If there are no phone book entries that match the search characters, the message *NO SUCH NAME* is displayed.

QuickWords

QuickWords are short text messages that can be displayed when you are paged (see table below for code; asterisk plus number).

QuickWord Code	Message	QuickWord Code	Message
*0	RUNNING LATE	*5	CALL HOME
*1	ON MY WAY	*6	WHERE ARE U
*2	PICK ME UP	*7	MEET YOU AT
*3	I AM HOME	*8	I LOVE YOU
*4	COME HOME	*9	HAPPY B-DAY



Setting the Auto On/Off Times

You can set your pager to turn OFF at one time and come back ON at a later time.

Press	To Display	Then Press
●	SET AUTO	▶ to activate
●	AUTO OFF	▶ to display OFF time
● and ▶	Auto Off time	▶ to go to Auto On
● and ▶	Auto On time	■ to save

Setting the Countdown Timer

Press	To Display	Then Press
●	COUNTDOWN TIMER	▶ to display choices
●	ON	▶ to select Timer ON
● and ▶	To set the time in hours, minutes, and seconds	■ to save

Note: To display the countdown timer instead of the Status screen, press and hold ■ for 2 seconds. Press ■ to return to the Status screen.

